

## **NORMAL OPERATING PARAMETERS**

Once the pump is running, check the following:

- Engine is running smoothly
- Vacuum gauge is within acceptable limits, 10"– 28" Hg
- Oil pressure and water temperature are within the pre-set limits
- Water is moving through the pump