

STARTING THE ENGINE USING THE A-91 CONTROLLER

The A-91 controller is designed to automatically empty a holding tank. It uses a pair of control floats that stop and start the pump. The floats should be set so that when the holding tank is full the controller turns on the pump and drains the tank. The pump continues to run until the tank is nearly empty, it then turns off the pump

- The YELLOW float is set to the high water mark and is the START signal
- The RED float is set to the low water mark and is the STOP signal
- Make sure the ignition KEY is in the OFF position
- Set the A-91 controller to Automatic